




Refer to User Manual for comprehensive information:  
<http://www.mttts-asia.com/wallaby-warmer/>


## Modes of operation

Touch MODE Selection panel to enter MODE Selection screen

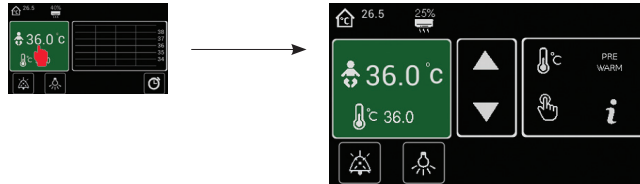

### BABY MODE


Set temperature: 34°C - 37.5°C

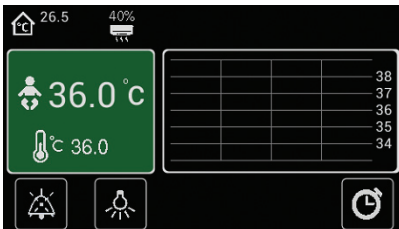

In BABY MODE, the warmer provides stable control of the baby's skin temperature by automatically adjusting the heater power to compensate for varying physiological and environmental conditions.

### PREWARM MODE


Set temperature: not available

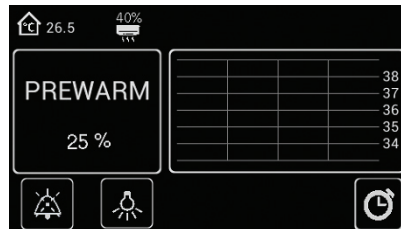

In PREWARM MODE, the warmer provides general alarm free pre-warming of the heater and environment above the warmer mattress.

### MANUAL MODE

Set heater power: 0-100%

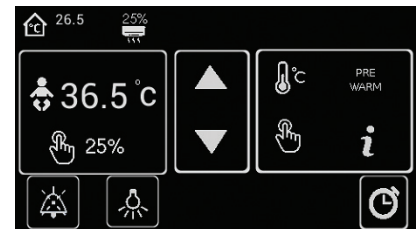

In MANUAL MODE, the warmer provides user-adjustable heater power and the option to monitor the baby's skin temperature using skin sensor.




If the patient skin temperature is more than 1°C above the set point, then the heater is OFF and the output value displayed is 0 (zero).

## Timers


### APGAR

Alarm at 1, 5 and 10 minutes. Switches off after 60 minutes.

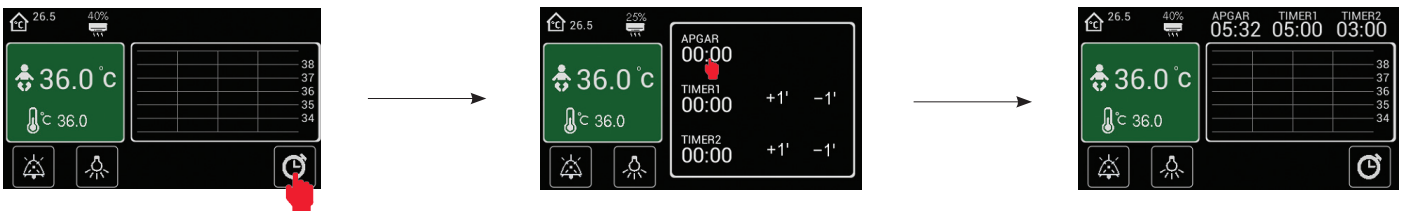



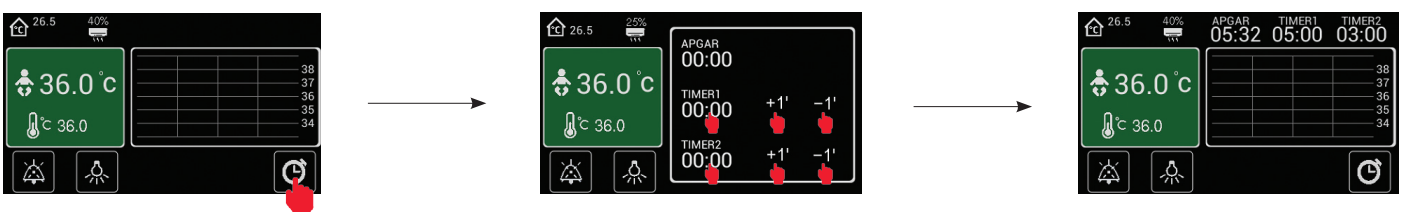


### PROCEDURE TIMERS

Alarm at the end of preset period from 1 to 99 minutes.



## Alarms


Alarm	Mode	Cause	Effect	Mute Button
<b>HIGH SKIN TEMP</b> 	BABY	Measured skin temperature higher than set temperature by 1°C	Heater power disabled	Silences audible alarm only
	MANUAL	Measured skin temperature higher 38°C	Heater power disabled	Silences audible alarm only
	PREWARM	Not active	Not active	Not active
<b>LOW SKIN TEMP</b> 	BABY	Measured skin temperature lower than set temperature by 1°C	Heater reduced to 25% of power	Cancels alarm and restores heater power
	MANUAL	Not active	Not active	Not active
	PREWARM	Not active	Not active	Not active
<b>SENSOR DISCONNECT</b> 	BABY	Skin sensor unplugged or faulty	Heater reduced to 25% of power	Silences audible alarm only
	MANUAL	Not active	Not active	Not active
	PREWARM	Not active	Not active	Not active
<b>POWER FAILURE</b> 	ALL	Power supply to Warmer failed	Warmer disabled	Silences audible alarm only
<b>ERROR</b> 	ALL	Software or hardware failure (refer to Service Manual for more information on error codes)	Warmer disabled	Silences audible alarm only




When available, the mute alarm period is 10 min.

## X-ray procedure

1. Turn the main switch of the device off and silence the power failure alarm
2. Wait until the device cools down
3. Lift the overhead unit up
4. Move overhead unit left or right
5. After X-ray procedure is completed return the overhead unit to center position
6. Make sure the overhead unit is locked in center position
7. Turn the device on

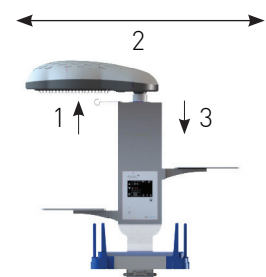

## Turning off the Warmer

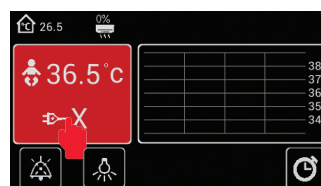

Press and hold the OFF symbol for 3 seconds



The action will activate POWER FAILURE alarm.